


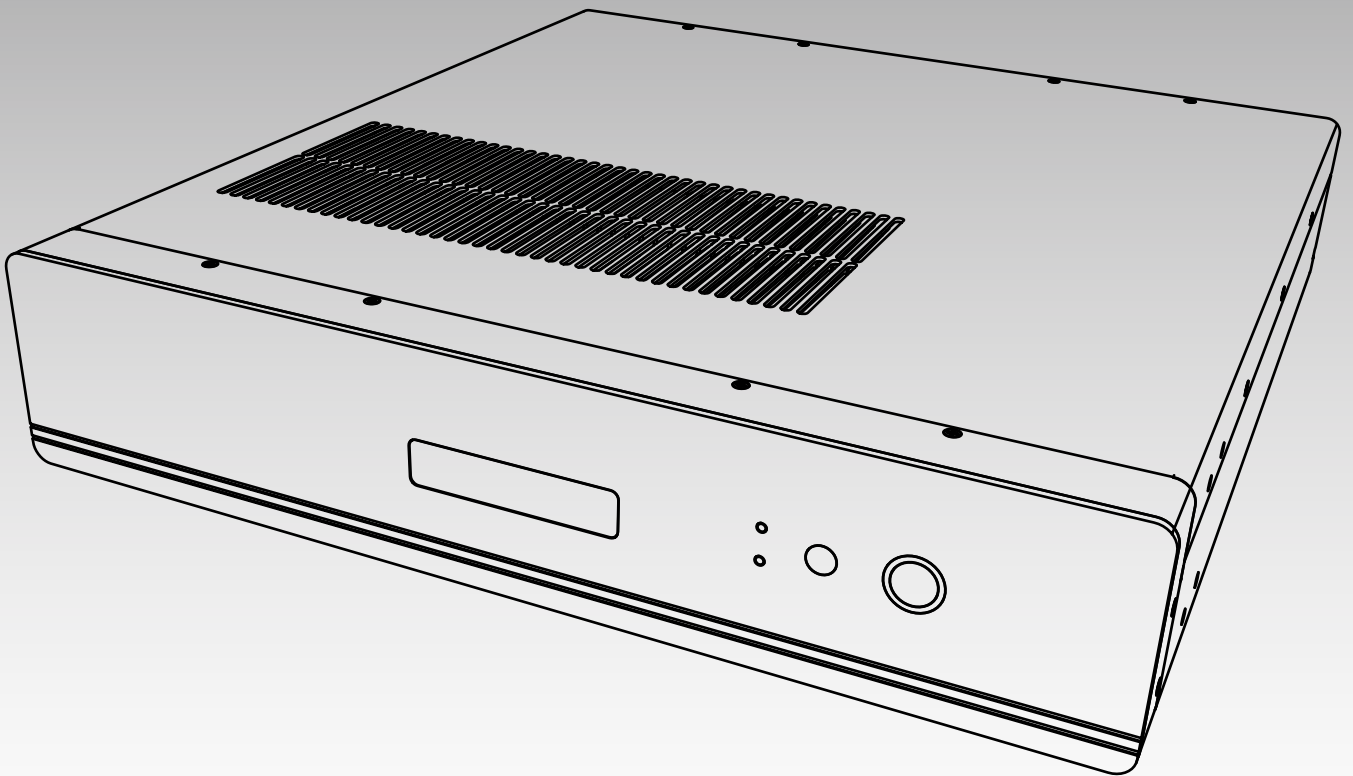

# PP 1500

Quick Start Guide  
Version 1.3.1




# PP 1500


## Quick Start Guide



### FRONT PANEL

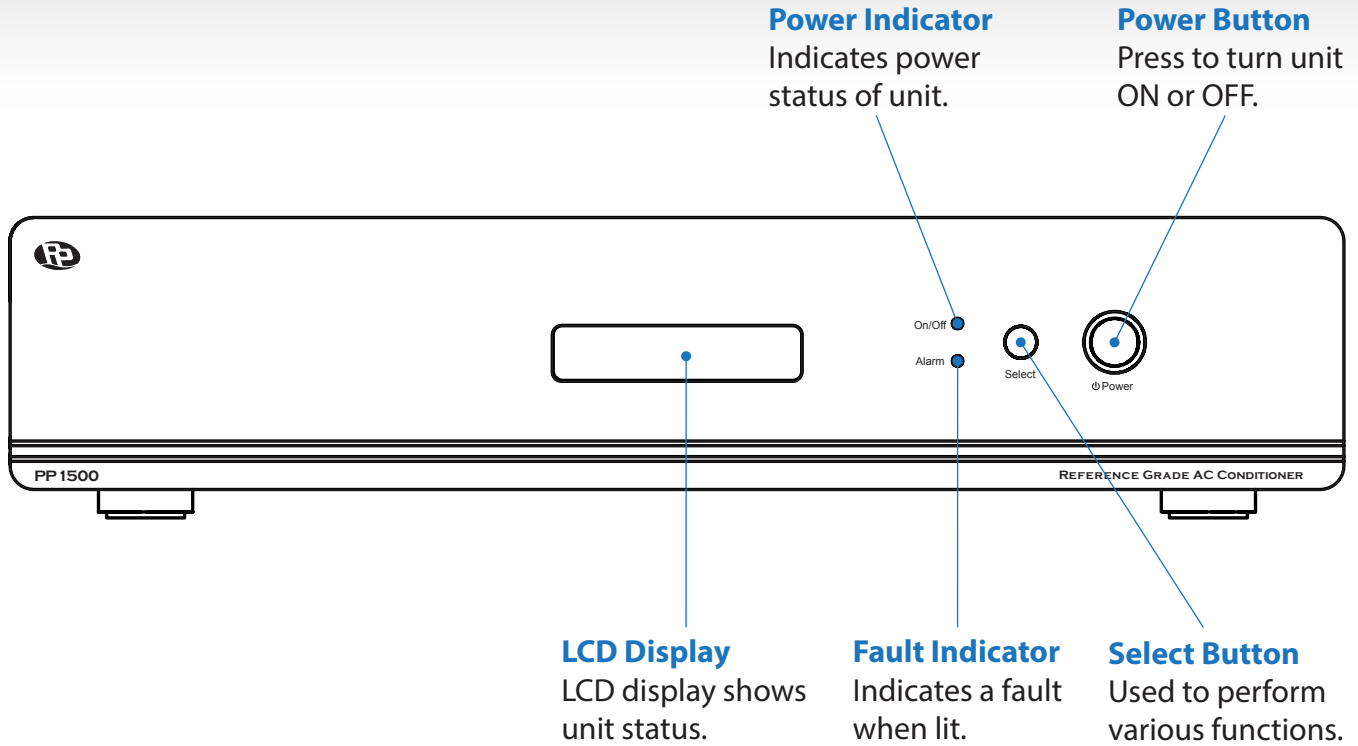

### BACK PANEL

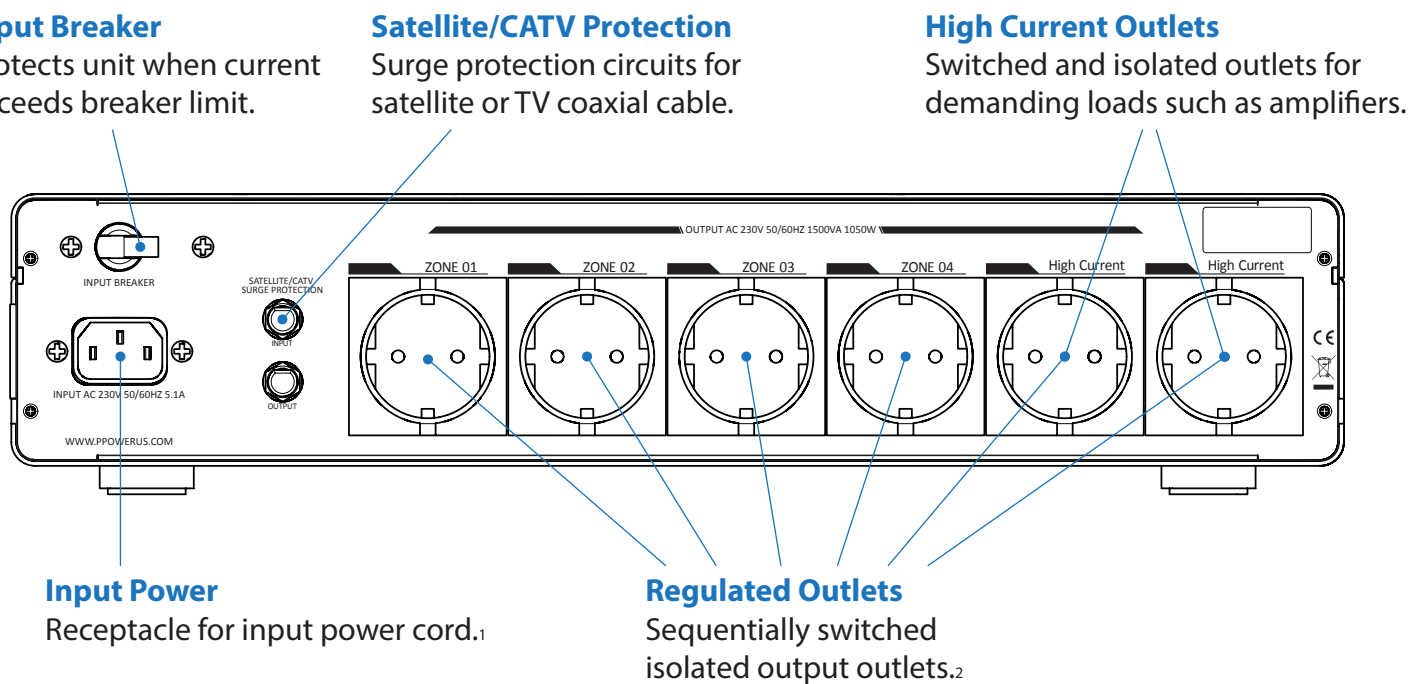

1. The model shown in the image is the 230V / 50Hz version. Other version not shown here: 120V / 60Hz.  
2. The model shown in the image is the shuko version. Other versions not shown here: NEMA (4 Zones), UK (6 Zones), AUS (6 Zones).

# PP 1500

## Quick Start Guide



### Operation Guide - Powering On

1. Confirm **INPUT BREAKER** is in the "OFF" position. By default, it should be "OFF".
2. Plug power cord into the **INPUT POWER** socket.
3. Plug in audio equipment such as CD player, pre-amp, and power amplifier into the rear outlets.
4. Switch **INPUT BREAKER** to the "ON" position.
5. **LCD DISPLAY** should now display the model name. The unit is in standby mode.

ProPower  
PP 1500

6. Press **POWER BUTTON** to turn unit on.
7. Unit will sequentially switch on the output outlets starting from **Zone 1** to **Zone 4**, then **HIGH CURRENT**.<sup>3</sup>

Turning on...0

Turning on...4

8. After all zones has been switched on, LCD displays output status.

Regenerating...

9. Enjoy the pure sound from your audio equipment!

### Operation Guide - Powering Off

1. Press **POWER BUTTON** while unit is on to turn it off.
2. Unit will sequentially switch off the output outlets starting from **HIGH CURRENT**, then from **Zone 4** to **Zone 1**.<sup>3</sup>

Turning off...4

Turning off...0

3. After switching off, the unit will be in standby mode.

ProPower  
PP 1500

4. Switch **INPUT BREAKER** to the "OFF" position.

<sup>3</sup> Number of zones vary depending on the output receptacle type: Shuko/UK/AUS (6 Zones), NEMA (4 Zones).

# PP 1500

## Quick Start Guide



### Operation Guide - Turning Off LCD Display

1. Press the **SELECT BUTTON** to toggle between two lighting modes. In the default mode, the **LCD DISPLAY** is turned on and the light around the **POWER BUTTON** is at full brightness. In the second mode, the **LCD DISPLAY** is turned off and the light around the **POWER BUTTON** is dimmed.

### Operation Guide - Changing Output Waveform

1. There are two different output waveform modes: **Sine-wave** (default) and **Modulated-wave**.
2. While the unit is regenerating output power, press and hold the **SELECT BUTTON** until **LCD DISPLAY** shows:



 
3. To switch to Modulated-wave output, press and hold the **SELECT BUTTON** until **LCD DISPLAY** shows:



4. The above steps will toggle between **Sine-wave** and **Modulated-wave** output modes.

### Operation Guide - Setting the Output Voltage

1. You can set the output voltage only when the unit is in standby mode (refer to section "Powering ON").
2. Press and hold the **SELECT BUTTON** for more than 2 seconds, then release. Repeat until **LCD DISPLAY** shows:



3. Short press the **SELECT BUTTON** to set the output voltage between several preset voltages.

# PP 1500

## Quick Start Guide



### Operation Guide - Power Amp Optimization

---

1. Certain amps may perform more optimally when the Power Amp Optimization feature is turned on.
2. To set Power Amp Optimization first enter standby mode (refer to section "Powering On").
3. Press and hold the **SELECT BUTTON** for more than 2 seconds, then release. **LCD DISPLAY** shows:

Power Amps  
Optimization Off

4. Short press the **SELECT BUTTON** to toggle Power Amp Optimization on and off.